



demolition hammer spare parts list

No.	Part Name	QTY	No.	Part Name	QTY
1	Shaft ring	1	40	Damping rubber sleeve	1
2	Lock sleeve ring	1	41	Shock absorber	1
3	Lock set	1	42	Paper pad	1
4	Lock set spring	1	43	Middle aluminum part	1
5	Steel ball $\phi 7.938$	6	44	O Type sealing ring	1
6	Screw	1	45	Thread ring	1
7	Chuck head	1	46	6201 Bearing	1
8	Impact lever	1	47	Iron and rubber gasket	1
9	Impact lever ring	1	48	Armature	1
10	Impact lever rubber shim	2	49	Bearing pad	1
11	Impact lever shim	1	50	608 Bearing	1
12	O Type sealing ring	2	51	O Type sealing ring	1
13	Hammer set	1	52	Fan guide	1
14	O Type sealing ring	1	53	Screw	2
15	Cylinder	1	54	Stator	1
16	Front aluminum part	1	55	Housing	1
17	Screw	4	56	Shock absorber	1
18	Plastic sleeve	1	57	Switch	1
19	O Type sealing ring	1	58	Brush holder	2
20	O Type sealing ring	1	59	Carbon brush	2
21	Hammer	1	60	Brush cap	2
22	O Type sealing ring	1	61	Housing cover	1
23	Piston	1	62	Screw	4
24	Cylindrical pin	1	63	Left handle	1
25	Connecting rod	1	64	Right handle	1
26	1212 Needle bearing	1	65	Cord clip	1
27	Crankshaft	1	66	Screw	3
28	Round flat key	2	67	Flat pad	4
29	6303 bearing	1	68	Screw	4
30	Oil seal	1	69	Cabel sheath	1
31	Gearing	1	70	Cabel	1
32	Rubber sleeve	1	71	Front handle hoop	1
33	6001 Bearing	1	72	Screw nut	1
34	Oil seal cover	1	73	Front handle bracket	1
35	Wool column	1	74	Front handle	1
36	Oil cap	1	75	O Type sealing ring	
37	O Type sealing ring	1	76	Screw	4
38	Gearing body	1	77	O Type sealing ring	
39	Rubber column	8			