



diamond drill spare parts list

No.	Part Name	QTY	No.	Part Name	QTY
1	Circlips for hole 40	1	27	Woodruff key	1
2	Framework oil seal	2	28	Primary gear	1
3	Cooling nozzle pedestal	1	29	Middle cover	1
4	Head shell	1	30	Bearing 629	1
5	Side Handel	1	31	Armature	1
6	Output shaft	1	32	Creepage shield ring	1
7	Bearing 6003	2	33	Wave pad 22	1
8	Spacer sleeve	1	34	Fan shroud	1
9	Small friction plate	1	35	Field Coil	1
10	Secondary gear	1	36	Motor housing	1
11	Big friction plate pressplat	1	37	Brush holder	2
12	Washer	1	38	Carbon brush	2
13	Locknut	1	39	Brush cover	2
14	Bearing 608	4	40	ST4*18 Screw	3
15	ST4*20 Screw	4	41	ST5*22 Screw	4
16	M5*50 Screw	4	42	Left handle	1
17	Spring washer 5	4	43	Speed control switch	1
18	Flat Washer 5	4	44	Tutamen	1
19	Big friction plate	1	45	ST4*14 Screw	2
20	Gear Bushing	1	46	Cord clamp	1
21	Small friction plate pressp	1	47	Rear support	1
22	Circlips for hole 35	1	48	Right handle	1
23	ST5*65 Screw	2	49	Sheath	1
24	M10*12 Screw	1	50	Cabel	1
25	Faucet	1	51	6.3 Buckle	2
26	Gear shaft	1	52	Tension spring	2