



circular saw spare parts list

No.	Part Name	Qty	No.	Part Name	Qty
1	ScrewM8*16	1	38	The motor set	1
2	Flat washer8*22*2	1	39	Motor housing	1
3	Endoplaten	1	40	Carbon brush	2
4	Blade	1	41	Brush holder	2
5	Outsideplaten	1	42	Brush cap	2
6	Circlip for shaft40	1	43	Screw M5*30	2
7	Protection cover	1	44	Flat washer5	3
8	Bearing gland	1	45	Spring washer5	3
9	Output shaft	1	46	Name plate	1
10	Woodruff key4*5*13	1	47	Flat Washer 8*19*1.6	1
11	Bearing6201	1	48	Base	1
12	Reset spring	1	49	Flat washer 6.5*13.5*2	2
13	Sunk screw M5x14	2	50	Wrench M6	1
14	Front cap	1	51	Wrench	1
15	Spacer bush	1	52	Wrench Spring	1
16	Gear	1	53	Wrench button	1
17	Circlip for shaft 12	1	54	Screw ST4x12	1
18	Bearing 606	1	55	Screw M6*14	1
19	Gear box	1	56	Screw M6*12	1
20	Coach screw M6x20	1	57	Compression spring	1
21	Sunk screw M6x16	1	58	Flat Washer 6	1
22	Rubber sleeve	1	59	Screw M6	1
23	Screw M5*33	1	60	Handle Cover	1
24	Locknut M5	1	61	Capacitor	1
25	Reset spring M5*12	1	62	Switch	1
26	Self lock spring	1	63	Screw ST4x14	2
27	Rubber column 4*8	2	64	Cord cover	1
28	Self lock piece	1	65	Handle	1
29	Bearing 6000	1	66	Cord	1
30	Armature	1	67	Cord Sleeve	1
31	Screw ST5*60	2	68	Screw ST4x16	5
32	Stator	1	69	Screw M5x45	1
33	Tension spring	2	70	Screw ST4x20	1
34	Flat washer 8*17*0.5	1	71	Inductance	1
35	Bearing608	4	72	T guide	1
36	Washer16*21	1	73	Wrench	1
37	Wind baffle	1			