



diamond drill spare parts list

No.	Part Name	QTY	No.	Part Name	QTY
1	Pedestal	1	47	Secondary gear shaft	1
2	M10*55 Screw	2	48	Bearing 6001	2
3	Upright	1	49	Circlips for shaft 20	1
4	Lifting cover	1	50	Gear	1
5	Spring washer 6	8	51	Head shell	1
6	M6*25 Screw	4	52	Circlips for shaft 25	1
7	M6*35 Screw	2	53	6905-2RS Bearing	1
8	Handgrip	1	54	Bearing 6005	1
9	M8*25 Bolt	4	55	Square key 5*5*16	1
10	M8 Nut	4	56	Output shaft	1
11	φ8 Circlips for shaft	8	57	Framework oil seal	2
12	φ8*φ14*10 Iron set	4	58	Faucet	1
13	Guide wheel shaft	2	59	Cooling nozzle pedestal	1
14	Plug	1	60	Circlips for hole 42	1
15	Left liner	1	61	M5*35 Screw	3
16	Right liner	1	62	Spring washer 5	5
17	Acorn nut	4	63	Bearing 6002	1
18	M4*16 Screw	4	64	Rubber column 5*9.5	1
19	M4*10 Screw	4	65	Armature	1
20	Middle liner	2	66	Creepage shield ring	1
21	Lock washer	2	67	Bearing 6200	1
22	Lifting body	1	68	Wave pad 30	1
23	Lock spring	1	69	Fan shroud	1
24	Screw	1	70	ST5*85 Screw	2
25	Small liner	2	71	Flat washer 5	2
26	M8*30 Screw	4	72	Field Coil	1
27	φ8 Spring washer	4	73	Tension spring	2
28	M12*60 Bolt	2	74	Motor housing	1
29	M12 Nut	2	75	M4*8 Screw	1
30	φ17 Circlips for shaft	2	76	Switch cover	1
31	Bearing 6003	2	77	Switch	1
32	Lifting gear shaft	1	78	ST4*14 Screw	2
33	M8*25 Screw	1	79	Cord clamp	1
34	Crank Handle	1	80	Switch capsule	1
35	Ball knob	2	81	M4*14 Screw	3
36	Control lever	1	82	Sheath	1
37	Square key 12*8*90	1	83	Cabel	1
38	Middle cover	1	84	M5*10 Screw	2
39	Bearing 629	2	85	Brush cover	2
40	Lock nut	1	86	Carbon Brush	2
41	Calathiform washer	1	87	Brush holder	2
42	Friction plate	2	88	Insulating strip	2
43	Secondary gear	1	89	M6*50 Screw	4
44	Axial sleeve	1	90	Flat washer 6	4
45	Friction plate pressplate	2	91	Bearing 6000	1
46	Square key 5*5*22	1			