


01-28单用电锤爆炸图

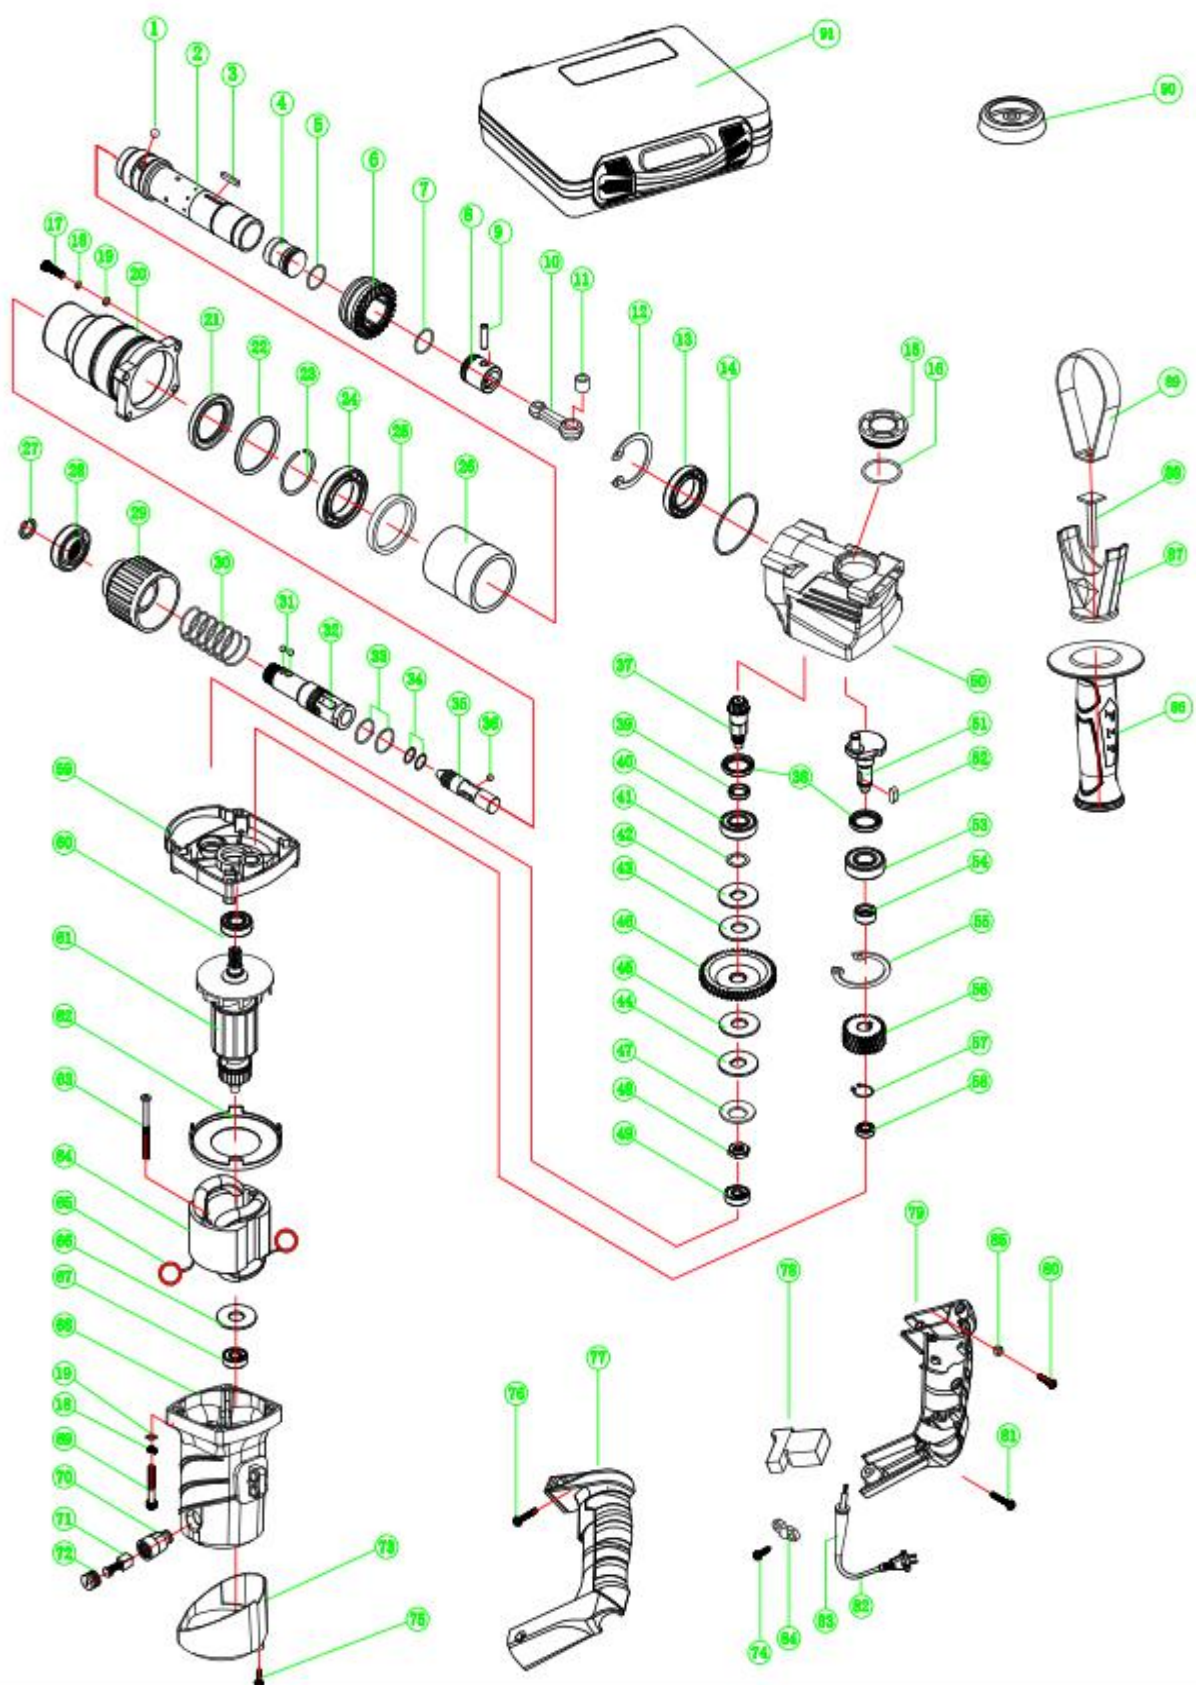

rotary hammer spare parts list

No.	Part Name	Qty	No.	Part Name	Qty
001	∅ 8 Steel Ball	3	047	Disc spring washer	1
002	Cylinder	1	048	Nut	1
003	Flat key	2	049	627 Bearing	1
004	Rammer	1	050	Reducer box	1
005	O Ring (FKM)	1	051	Eccentric Shaft	1
006	Roundwire snap rings for shafts	1	052	Flat key	1
007	O Ring (FKM)	1	053	6202 Bearing	1
008	Piston	1	054	Range ring	1
009	Piston Pin 6*24.5	1	055	Spring	1
010	Connecting rod	1	056	Gear (gear 1)	1
011	Neeble bearing HK0810	1	057	Spring	1
012	∅ 47 Elastic spring for hole	1	058	698 Bearing	1
013	Oil Retaining Bearing	1	059	Middle cover	1
014	O Ring of Front Housing	1	060	6000 Bearing	1
015	Oil seal cover	1	061	Armature	1
016	O Ring	1	062	Air director	1
017	Inside hex bolts	4	063	Philip's head screw	2
018	Spring Washer	4	064	Field Coil	1
019	Flat washer	4	065	Ring	2
020	Staight barrel	1	066	Anti-dust Washer	1
021	Framework oil seal	1	067	608 Bearing	1
022	Flat gasket	1	068	Motor Housing	1
023	Spring	1	069	Inside hex Screw	4
024	Bearing 6907	1	070	Brush holder	2
025	Rubber ring	1	071	Carbon brush	2
026	Range Sleeve	1	072	Brush holder cover	2
027	Roundwire snap rings for shafts	1	073	Rear Cover	1
028	Chuck head	1	074	Philip's head screw	2
029	Steel Ball Carrier	1	075	Philip's head screw	2
030	Slide bushing spring	1	076	Philip's head screw	4
031	∅ 7 Steel Ball	4	077	Switch handle (left)	1
032	Rotary sleeve	1	078	Switch	1
033	O Ring	2	079	Switch handle (right)	1
034	O Ring	2	080	Philip's head screw	1
035	Shock sub	1	081	Philip's head screw	1
036	∅ 7 Steel Ball	3	082	Cabel 2*1*2.6	1
037	Bevel Gear Shaft (gear 3)	1	083	Sheath	1
038	Framework oil seal	2	084	Cord Clamp	1
039	Range ring	1	085	Screw	1
040	6002 Bearing	1	086	Side handle	1
041	Washer	1	087	Bracket	1
042	Square Washer	1	088	Square head bolt	1
043	Friction plate	1	089	Side Handle Hoop	1
044	Square Washer	1	090	Anti-dust Cap	1
045	Friction plate	1	091	Plastic Box	1
046	Flat gear (gear 2)	1			