



## electric drill spare parts list

No.	Part Name	QTY	No.	Part Name	QTY
1	Screw	1	20	Rotor	1
2	Chuck	1	21	Brush holder	2
3	Spindle	1	22	Carbon brush	2
4	Steel ball	1	24	Ball bearing 607	1
5	Circlip	1	25	Screw	2
6	Ball bearing 6001	1	26	Wind ring	1
7	Circlip	1	27	Stotor	1
8	Screw	2	28	Housing	1
9	Screw	1	29	Lable	1
10	Gear box	1	31	Switch block	1
11	Big gear	1	32	Switch	1
12	Copper bush	1	34	Tension disc	1
13	Bal bearing 696	1	35	Screw	2
14	Gear shaft	1	36	Cord guard	1
15	Primary gear	1	37	Handle cover	1
16	Steel ball	1	38	Screw	4
17	Copper bush	1	39	Screw	2
18	Middle cover	1	40	Cord plug	1
19	Ball bearing 607	1			