

## J02-100 SPARE PARTS LIST

No.	Part Name	QTY	No.	Part Name	QTY
1	Outer Flange	1	26	Bearing 608-2RS	1
2	Grinding Wheel	1	27	Bearing cover	1
3	Inner Flange	1	28	Screw M4*12	2
4	Wheel cover	1	29	Armature	1
5	Screw, M6*18	1	30	Anti-dust Ring	1
6	Spindle	1	31	Bearing 607-2RST	1
7	Key, 3*10	1	32	Bearing cap	1
8	Anti-dust cover	1	33	Wind baffle	1
9	Screw, M4*14	4	34	Screw ST3.9*75	2
10	Spring Washer	4	35	Stator	1
11	Flat washer	4	36	Motor housing	1
12	Front cover	1	37	Carbon brush	2
13	Bearing 6201-2RST	1	38	Brush holder	2
14	Circlip 32	1	39	Screw ST3.9*10	2
15	Big gear	1	40	Terminal	1
16	Circlip 12	1	41	Switch	1
17	Bearing 696-2Z	1	42	Screw M4*6	2
18	Side handle	1	43	Capacitor 0.22uF	1
19	Screw ST4.2*22	4	44	Cable clamp	1
20	Grear box	1	45	Screw ST4.2*16F	2
21	Lock Button	1	46	Rear housing	1
22	Lock spring	1	48	Cord guard	1
23	Steel ring 6	1	49	Cable plug	1
24	Hex Screw M6	1	50	Spanner	1
25	Pinion	1			

