



cordless drill spare parts list

No.	Part Name	Qty	No.	Part Name	Qty
1	Charger	1	25	Third layers of the planet wheel	5
2	Battery	1	26	Planet carrier	1
3	The host is connected with the bracket	1	27	Gasket	1
4	Host link	2	28	Front cover	1
5	Back cover	1	29	Shaft lock hex	8
6	Switch	1	30	High and low speed shrapnel	1
7	L/F button	1	31	Second layers of the planet wheel	5
8	Right housing	1	32	The third layer of the sun wheel	1
9	Screw	6	33	Adjusting ring	1
10	Washer	1	34	Rivet	4
11	Spring	1	35	Variable speed gear ring	1
12	Nut	1	36	First inner ring gear	1
13	Torque locating shrapnel	1	37	Second layer of the sun wheel	1
14	Torque cup	1	38	First layers of the planet wheel	3
15	Bearing	2	39	First spindle sleeve	1
16	Chuck	1	40	Screw and washer sets	2
17	Screw	1	41	Motor gear	1
18	Spindle	1	42	Indicator light	1
19	Steel ball ϕ 4	12	43	Motor bracket	1
20	Torque shim 1003B2.8H	1	44	High and low speed button	1
21	Pin ϕ 3*29.5	2	45	Spring	2
22	Second spindle sleeve	1	46	Left housing	1
23	Output shaft 1003B	1	47	Motor	1
24	Third inner ring gear	1			