


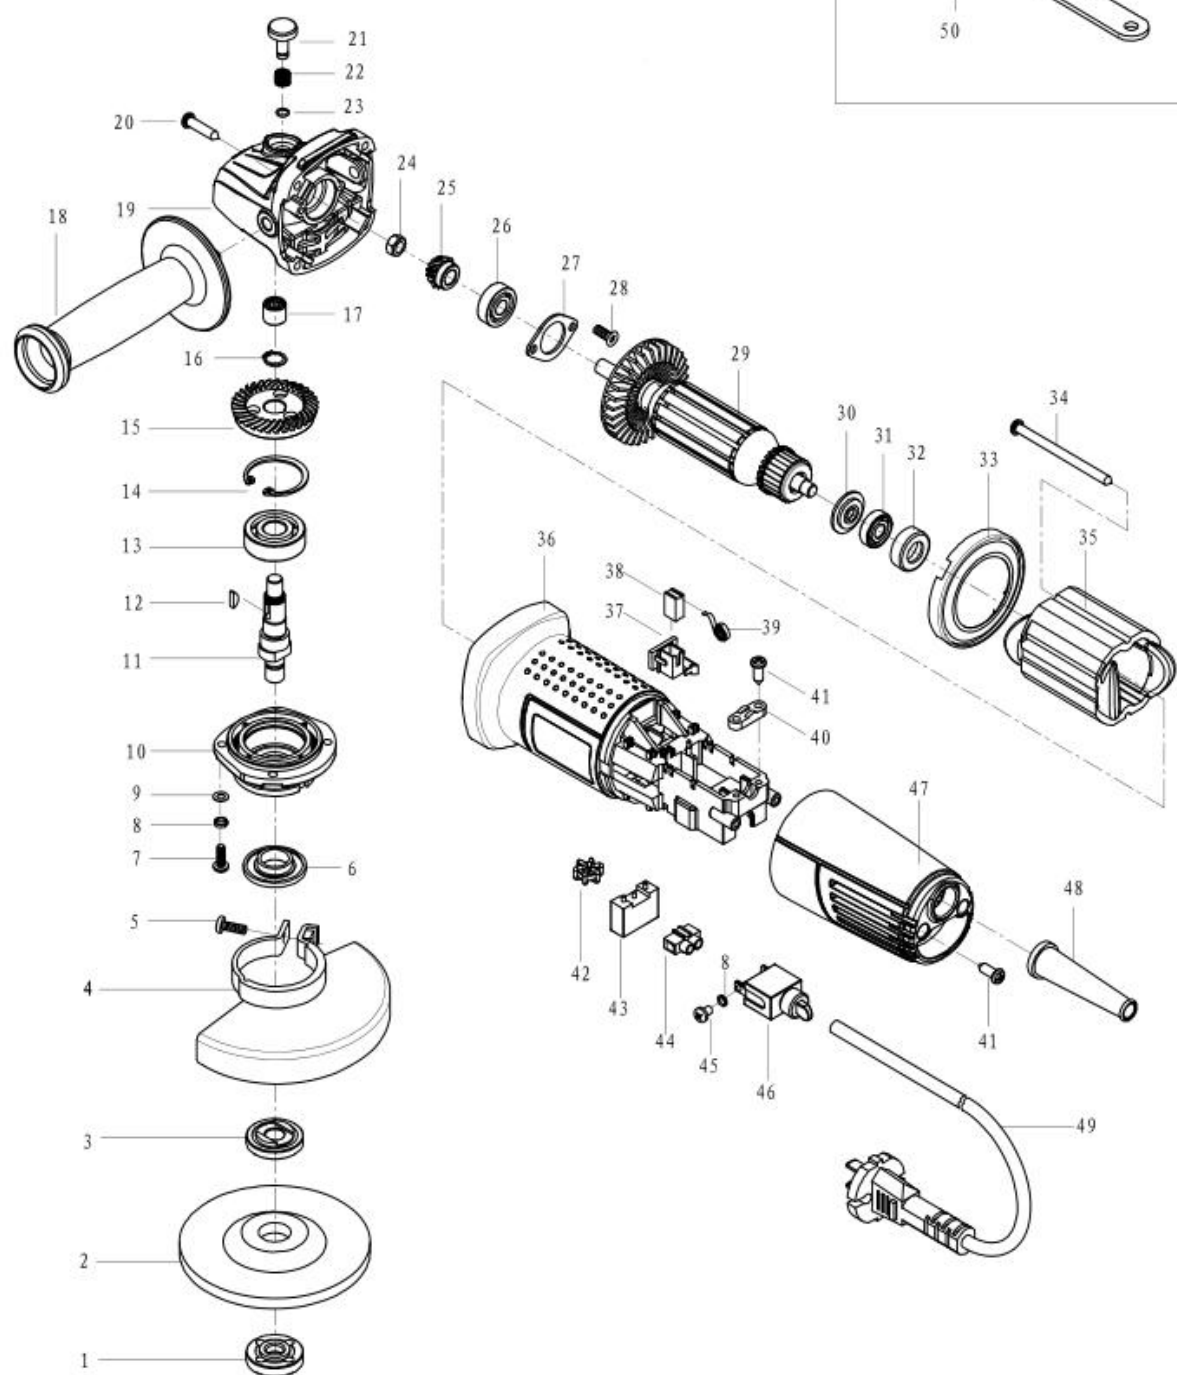

ANGLE GRINDER spare parts list

No.	Part Name	QTY	No.	Part Name	QTY
1	Outer Flange	1	26	Bearing 608-2RZ	1
2	Grinding wheel	1	27	Bearing clamp	1
3	Inner Flange	1	28	Screw,M4X10	2
4	Wheel cover	1	29	Armature assembly	1
5	Screw,M6X18	1	30	Dust ring	1
6	Anti-dust cover	1	31	Bearing 607-2Z	1
7	Screw,M4X14	4	32	Bearing sleeve	1
8	Spring washer,4	4	33	Wind baffle	1
9	Flat washer,4	4	34	Screw ST4.2X70	2
10	Bearing box	1	35	Stator Assembly	1
11	Spindle	1	36	Motor housing	1
12	Key 2.5X3.7X10	1	37	Carbon brush holder	2
13	Bearing,6201-2RS	1	38	Carbon brush	2
14	Internal circlip 32	1	39	Coil spring	2
15	Big Gear	1	40	Cord clamp	1
16	Circlip11	1	41	Screw ST4.2X14	4
17	Needle bearing HK0810	1	42	Inductor	1
18	Side handle	1	43	Capacitor(0.22uf)	1
19	Gear box	1	44	binding post	1
20	Screw,ST4.2X22	4	45	Screw,M4X6	2
21	Lock pin	1	46	Switch	1
22	Spring	1	47	Rear cover	1
23	Circlip 6	1	48	Cord guard	1
24	Hex.Nut M8	1	49	Cable plug	1
25	Small gear	1	50	Spanner	1